

FIG. 2

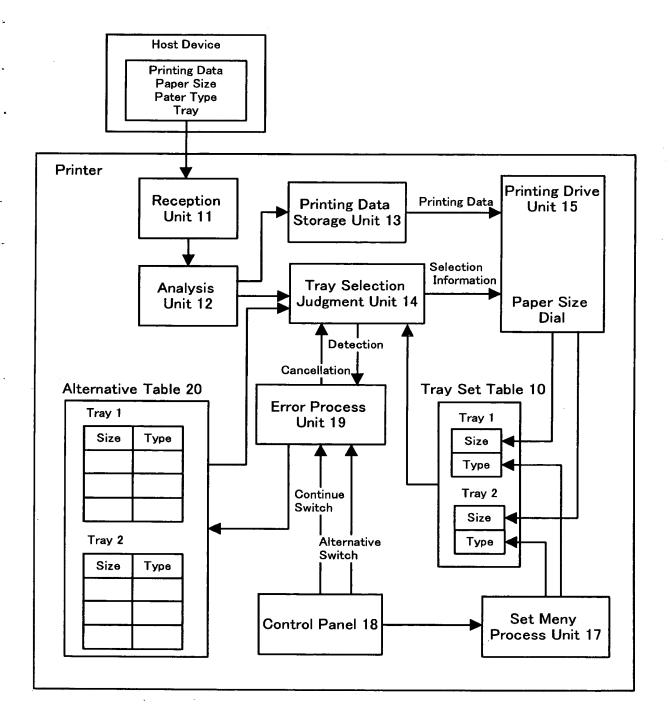


FIG. 4

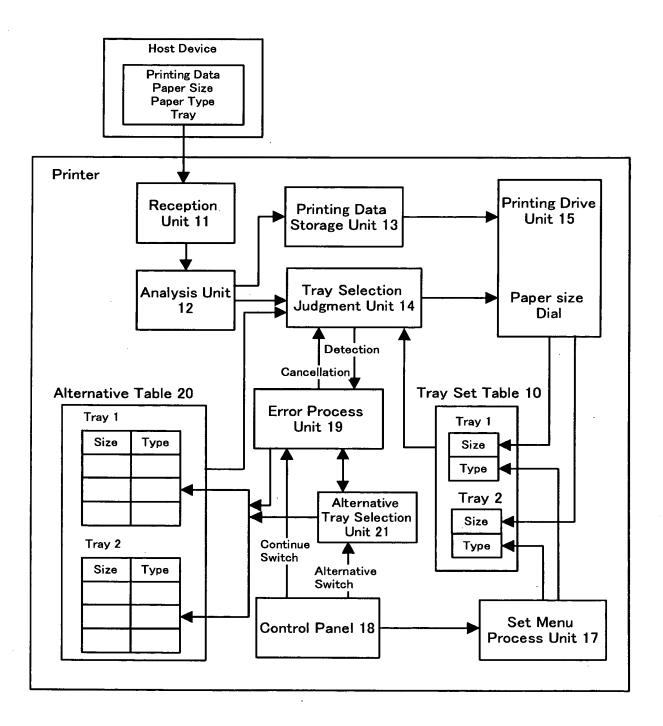


FIG. 5

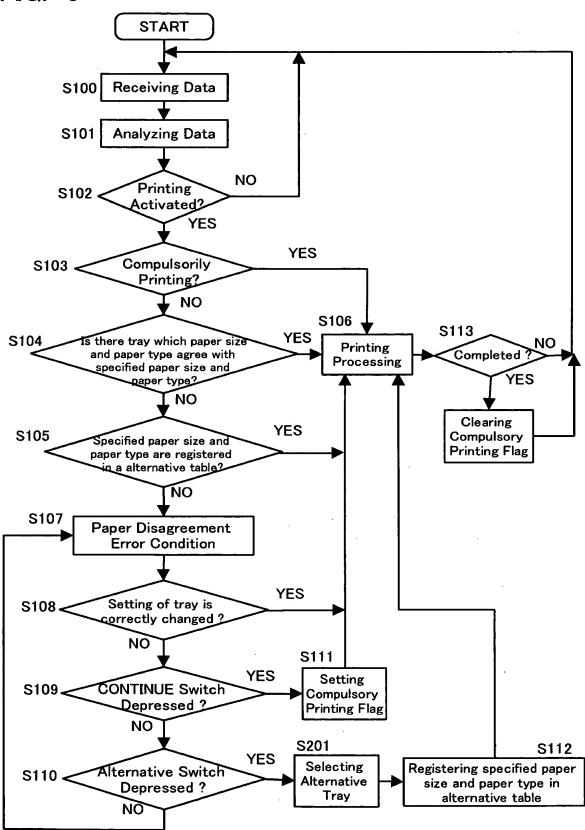


FIG. 6

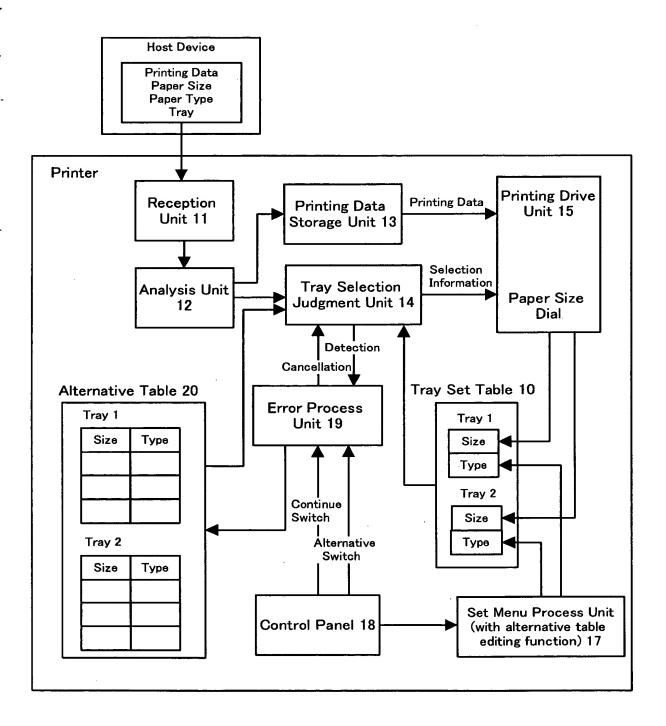


FIG. 7

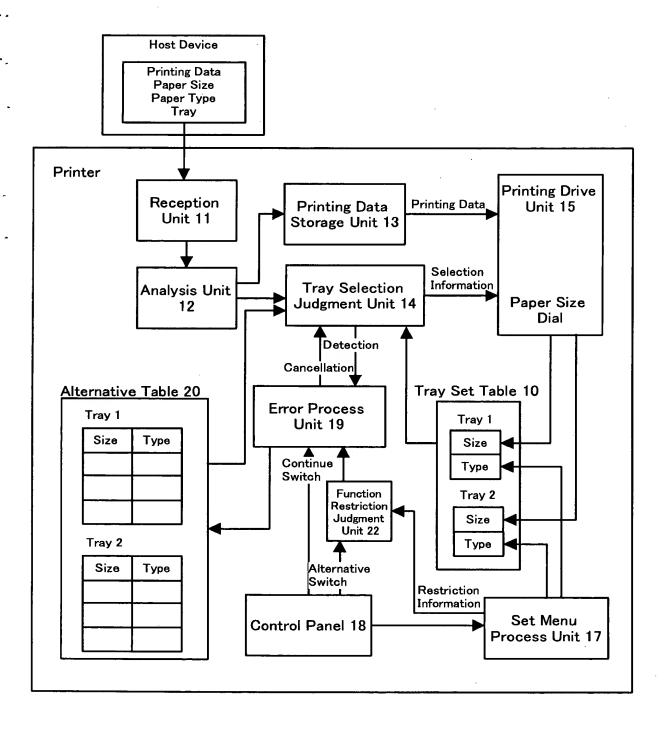


FIG. 8

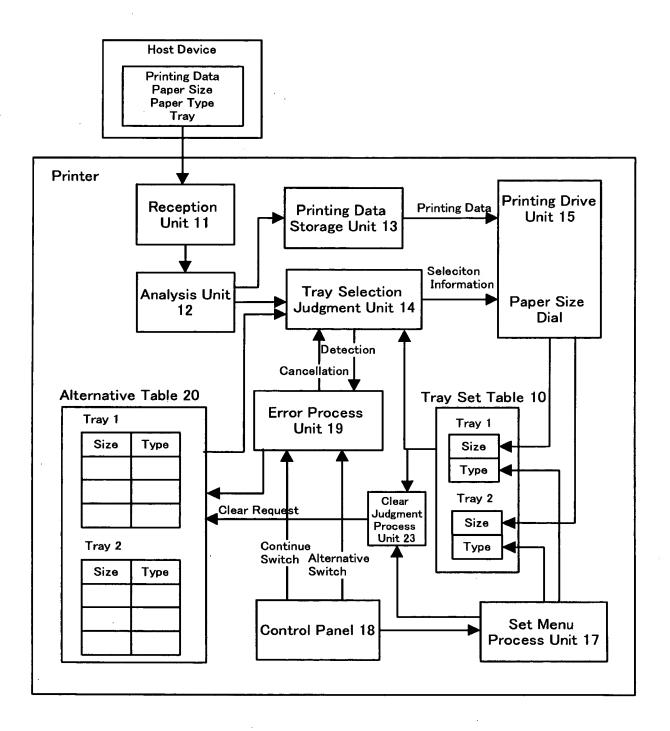


FIG. 9

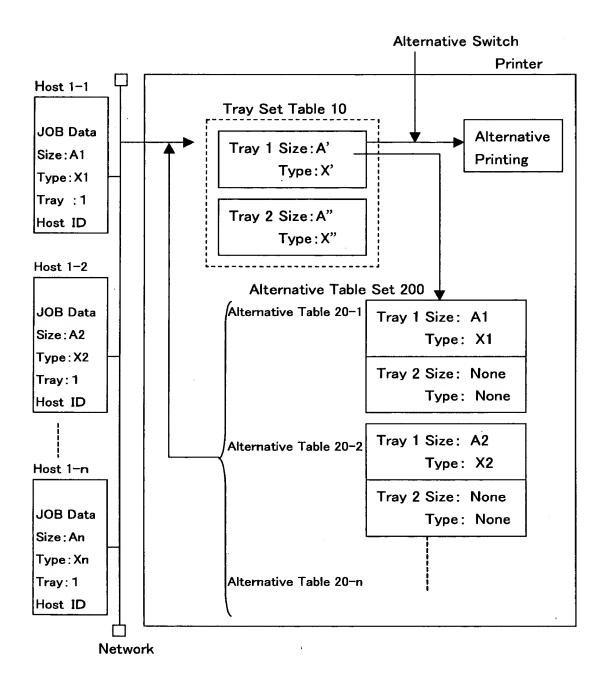


FIG. 10

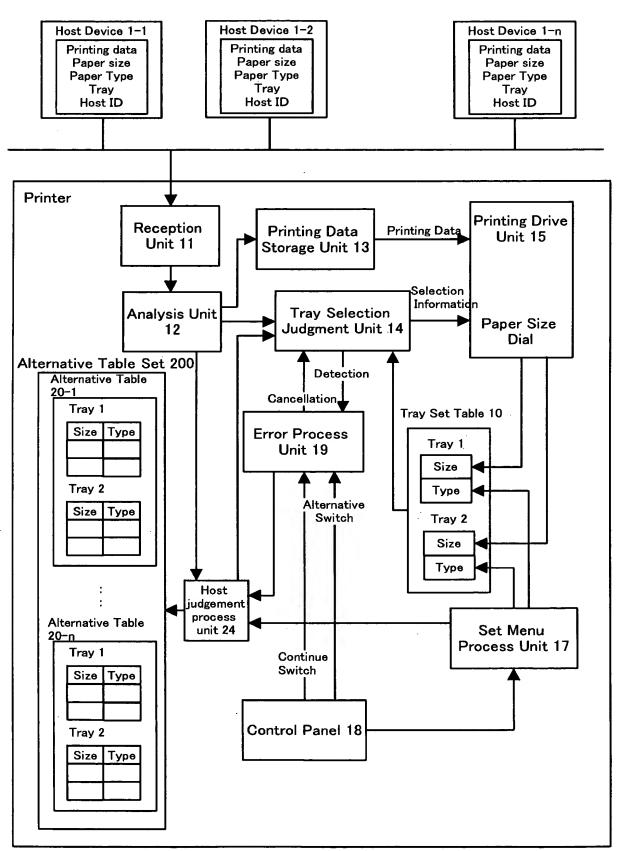


FIG. 11

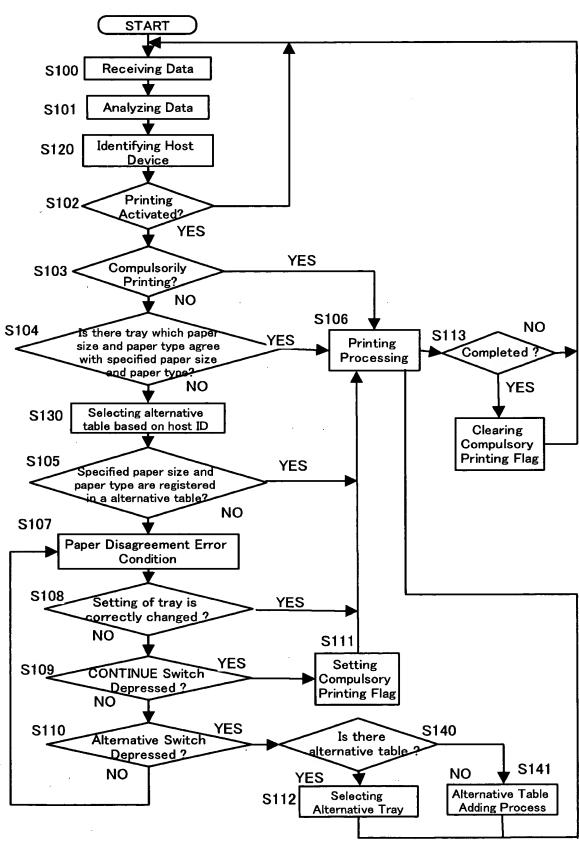


FIG. 12

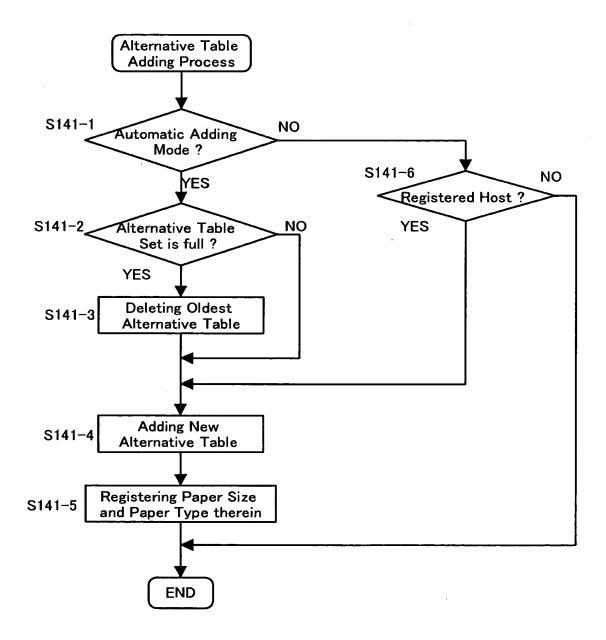


FIG. 13

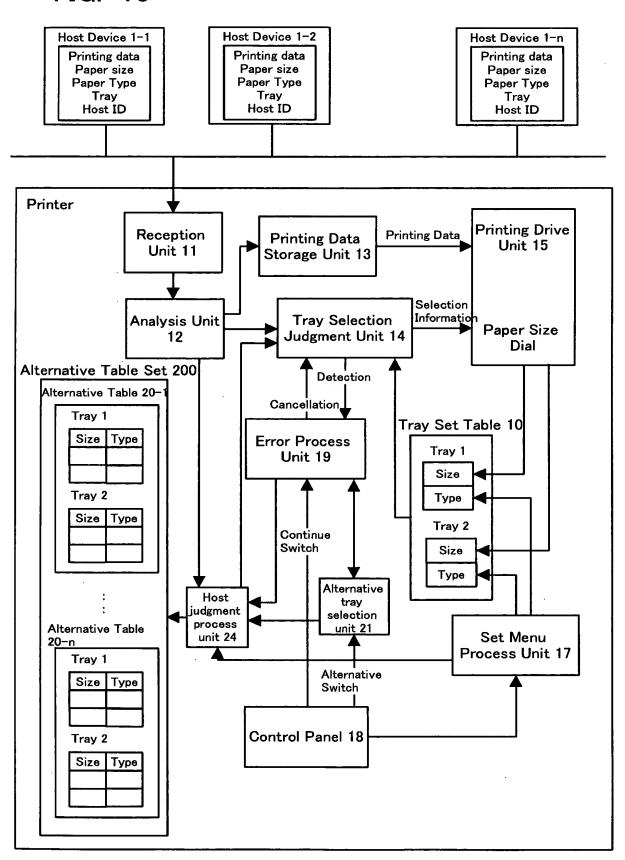


FIG. 14

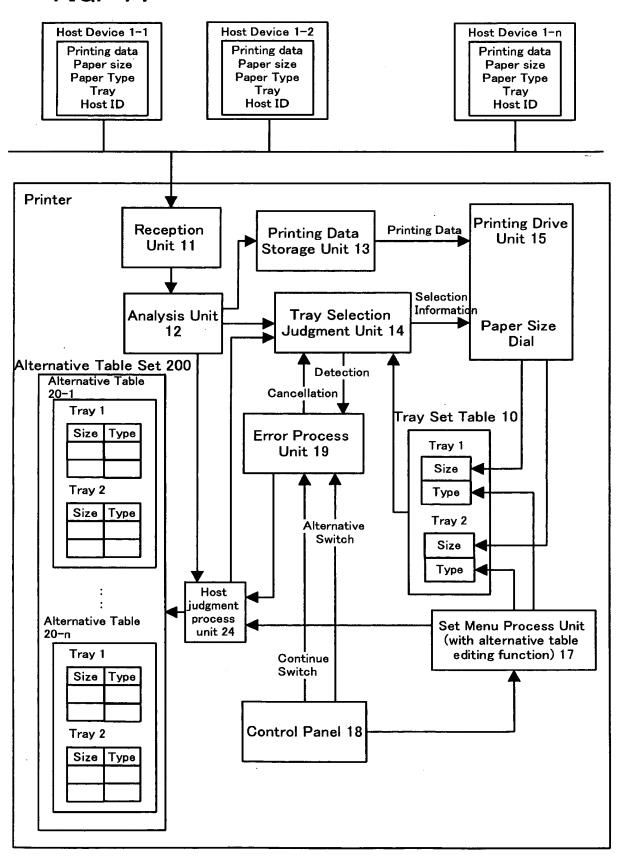


FIG. 15

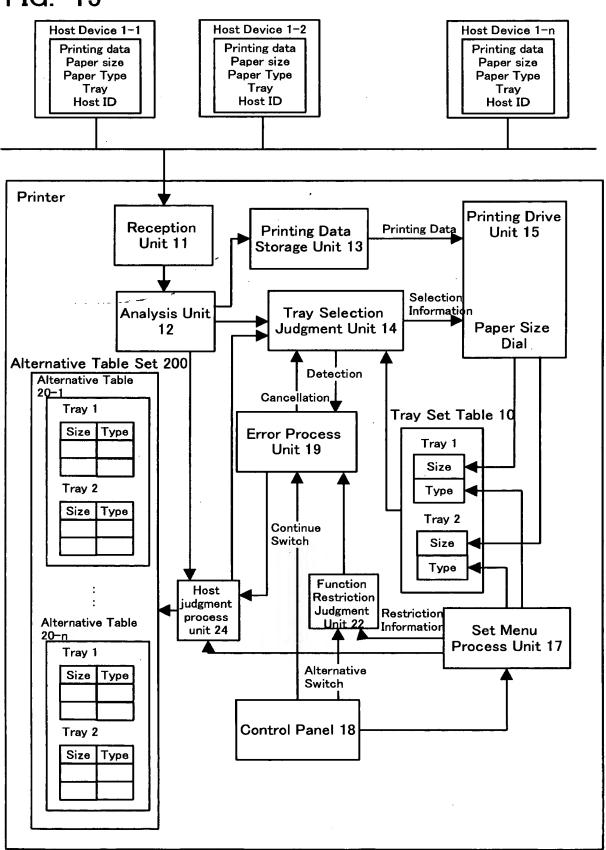


FIG. 16

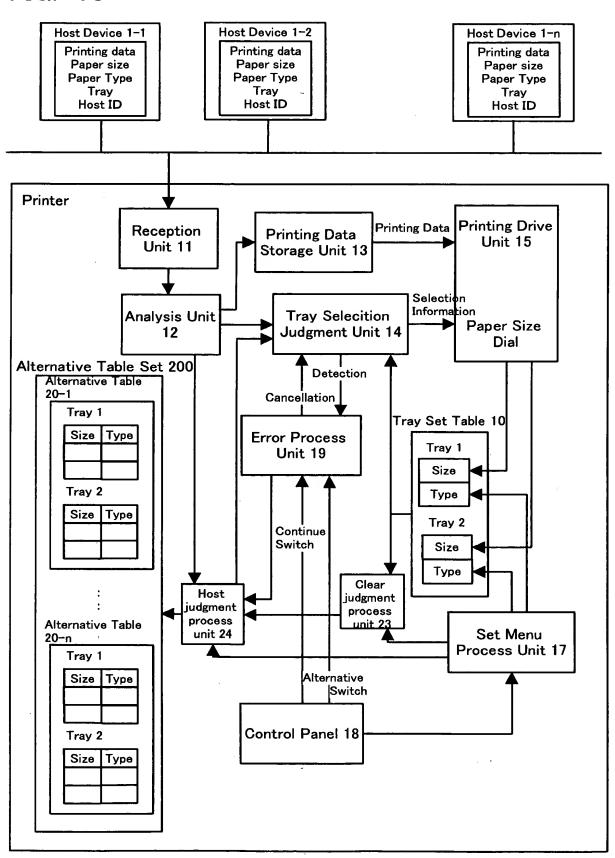


FIG. 17

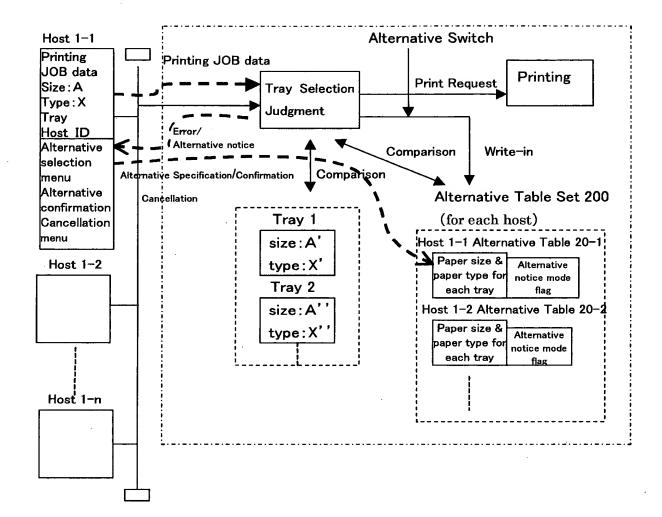


FIG. 18A

□Menu Window	
Information:	
Warning: Substitute Printing Print from tray 1 (A4 Plain) for Letter Plain OK Cancel	

FIG. 18B

□Menu Window	
Information:	
Error : Paper Miss match	
Load tray 1 : Letter Plain	
Select Operation:	
> Change Paper ▼	ОК
Change Paper	
Select tray 1 (<u>A4 Plain</u>) for <u>Letter</u> <u>Plain</u>	
Select tray 2 (<i>Legal Bond</i>) for <i>Letter Plain</i>	•
•	
·	
Information for Substitute Printing: ©Need Information ONot Need Information	

FIG. 19

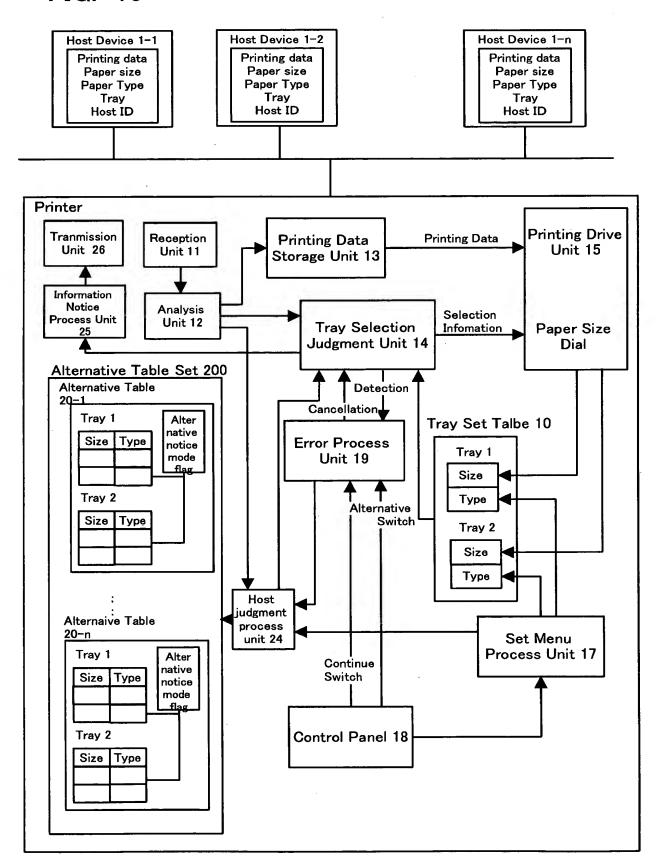


FIG. 20

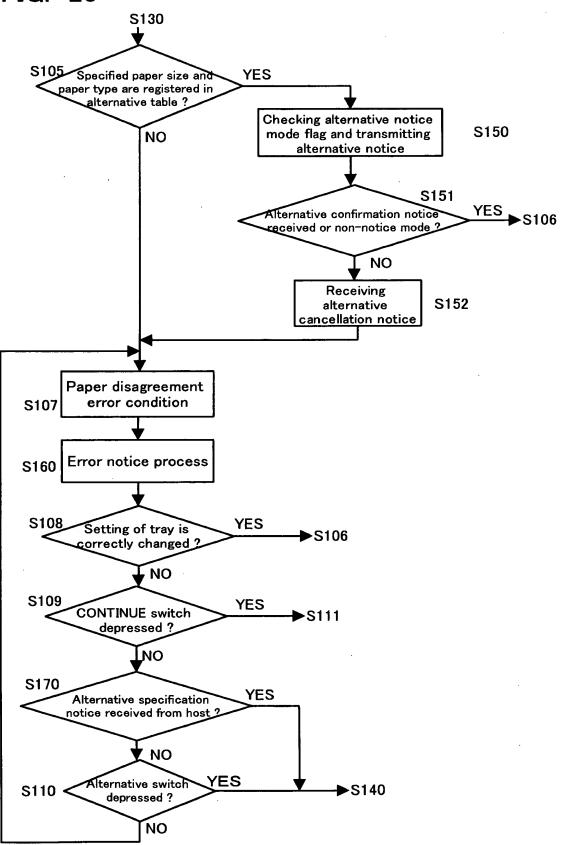


FIG. 21

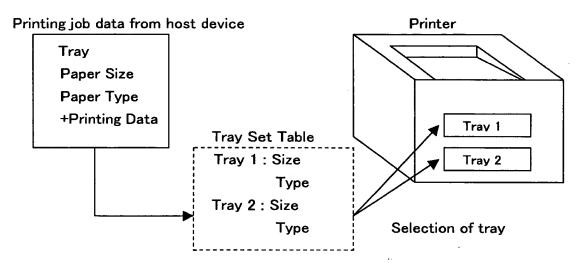


FIG. 22A

Changing paper in tray


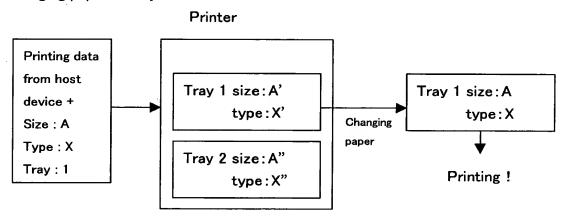


FIG. 22B

Compulsory printing by CONTINUE switch



.~

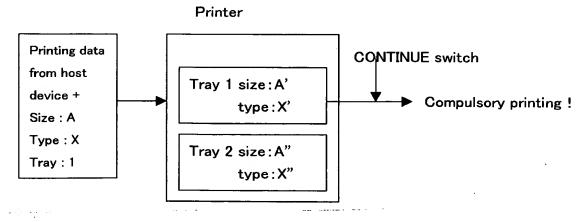